

Pro Power 20K™

Professional Electric File

The Pro Power 20K™ was designed in the U.S.A. It is a very safe instrument when used properly. Please familiarize yourself with the operational procedures to ensure optimum results.

- The Pro Power 20K, when used with the correct bits, is ideal for manicures and pedicures,
- The Pro Power 20K utilizes a powerful, variable speed motor driven by a rechargeable power station producing speeds up to 30,000 revolutions per minute.
- Filing attachment bits are available through your local distributor or contact Medicoool, Inc, at the address below. Proper hygiene practices recommend that the bits be sanitized with Let Touch Sanitizer after use on each client. The Lets Touch Sanitizer is distributed by Medicoool, Inc.

ONE YEAR LIMITED WARRANTY

The following warranty policy applies to the original purchaser of this product. Please complete the enclosed Warranty Registration Card and mail it to Medicoool, Inc within ten days of purchase.

Your Pro Power 20K has a one year warranty from date of purchase. If at any time during the warranty period your Pro Power 20K fails to function properly (except for obvious abuse), Medicoool, Inc, at its option, will replace it with a repaired, new or rebuilt Pro Power 20K.

Proof of purchase is required for all warranty repair.

Before returning your Pro Power 20K for repair contact Medicoool Customer Service at 310-782-2200. Include \$15 (\$25 Canada, Outside the U.S.A. please call) to cover return handling fee / inspection fee. The actual cost of return shipping will be added to your repair invoice. This warranty gives you specific legal rights and you may also have additional rights which vary from state to state.

IMPORTANT SAFEGUARDS

Read all instructions carefully before using this product.

DANGER! To reduce risk of electrocution:

- The Pro Power 20K comes with a battery charger that has a plug to fit a 100V-115V outlet. NOTE: a power adapter (not included) is required to charge the battery pack using any other power source other than 100V-115V outlet. Never force the plug into an outlet.
- **Do not** use the instrument while bathing or washing.
- Never place or store the instrument where it can fall or be pulled into a tub, sink or toilet.
- **Never** reach for an appliance that has fallen into water. Unplug it immediately before retrieval of unit.
- **Never** submerge the unit or convertor in water or any other liquid.

WARNING! To reduce the risk of burns, electrocution, fire or injury


- **Do not** operate the instrument if it has a damaged cord or plug, if it is not working properly, or if it is immersed in water.
- **Do not** excessively bend or pull the cord. Unplug the cord by grasping the plug—not the cord. Keep the cord away from heated surfaces.

This product has been designed for manicure-pedicure ONLY. Do NOT use the instrument for any other purpose

SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE



Pro Power 20K

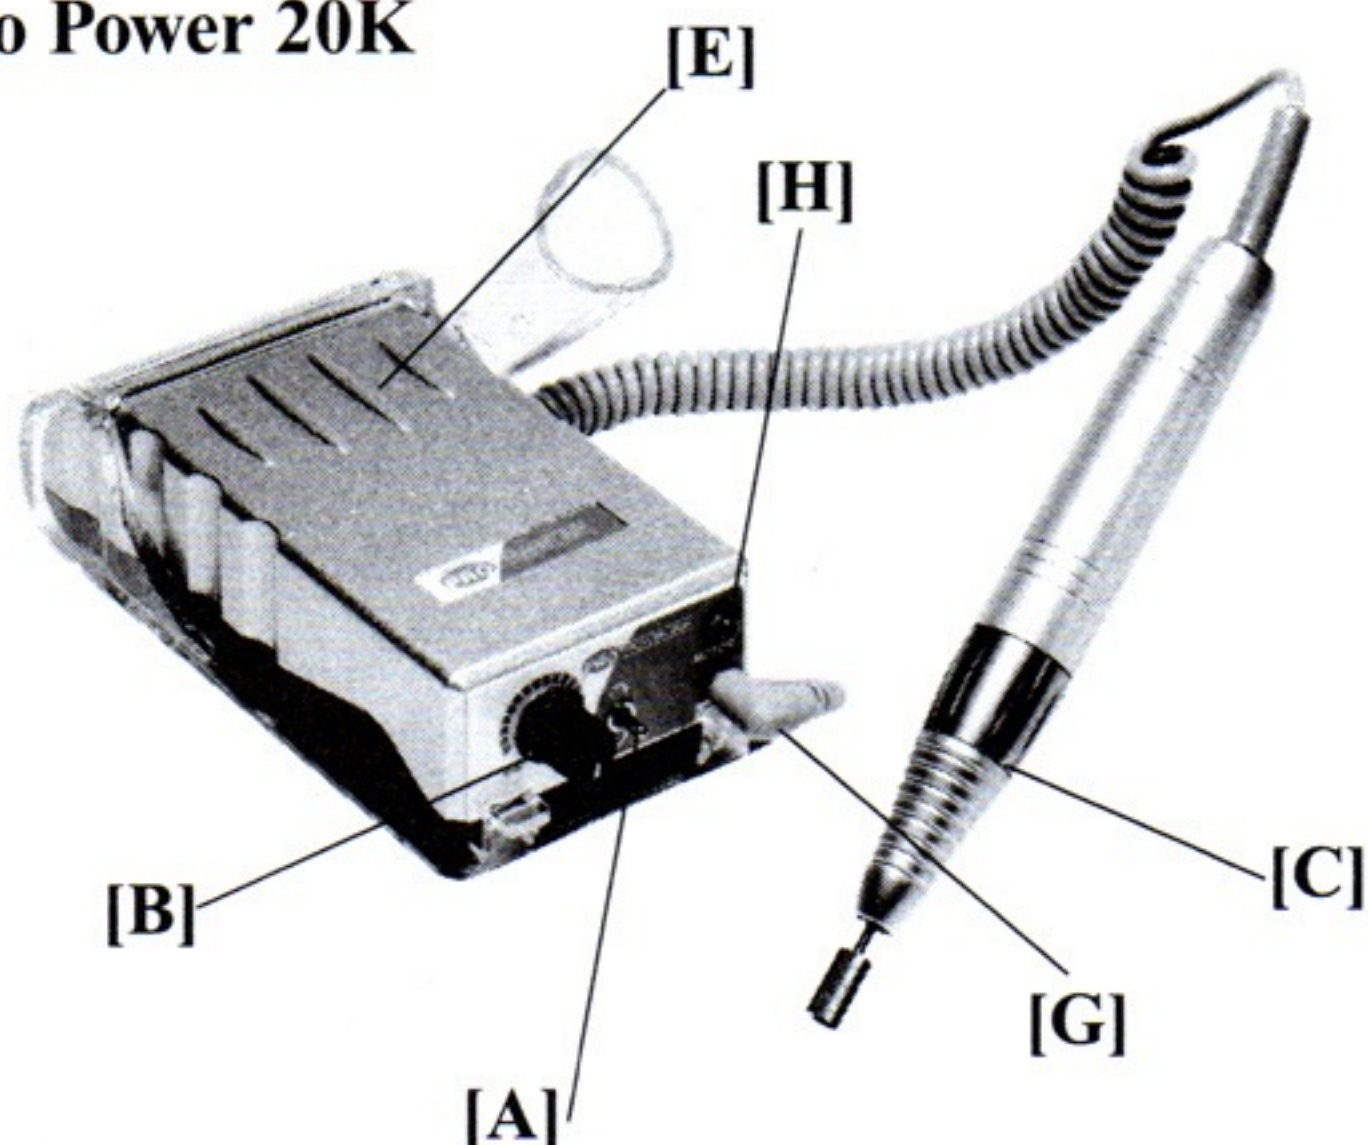

CONTROL/FEATURES

The Pro Power 20K is a professional electric file designed for professional nail technicians. It is designed for use on natural nails, acrylic nails, sculptured nails, wraps and for pedicures.

- **Forward/Reverse Switch** - Pushing the forward/reverse toggle switch up spins the bit clockwise. Pushing the switch down spins the bit counter clockwise. (fig. A)
- **Variable Speed Control** - Increase the speed by turning the speed control dial (fig. B) clockwise-up to a maximum of 30,000 RPM. To decrease speed, turn the speed-control dial counter clockwise.
- **Locking Chuck** - The Pro Power 20K has a locking chuck (fig. C) that accepts all **standard 3/32" Bits**. Make sure the machine is turned off. Open the locking chuck by turning the chuck counter clockwise until it clicks open. Insert your bit shank into the chuck. Lock the chuck by turning the locking mechanism clockwise until it clicks. The bit should insert easily and not be **forced**. No tools are required.
**** Never switch on the machine without a bit in the chuck ****
- **ON/OFF Switch** - Turn the machine on and off (fig. B). It will click on and off before increasing or decreasing the speed of the motor.
- **Battery Charging** - The battery charger uses a plug that fits into the power station (fig. E) and then inserts into a 110V-115V socket. When charging, the indicator light (fig. H) will indicate red. When fully charged the light will indicate green. NOTE: The initial charge must be at least 7 hours long.
Do not charge overnight.
- **Pro Power 20K Case** - The case is designed to hold the power station and the hand piece in separate compartments. Use the belt clip to fasten to your clothing.




Correct hand position when holding the Pro Power 20K

OPERATIONAL PROCEDURES


1. Fully charge the power station and choose the bit you wish to use.
2. Make sure the on/off-speed control knob (fig. B) is in the off position.
3. Make sure the hand piece is plugged in. (fig. G)
4. Place a standard 3/32" bit firmly into the chuck and lock the chuck.
5. Select either the "forward" or "reverse" toggle setting (fig. A)
6. Use either the provided carrying case to hold the power station or place the unit on your nail station along with the hand piece cradle.
7. While holding the hand piece as indicated in photo for proper control, switch on the machine to the desired speed. NOTE: Proper support of the machine and the nail to be filed is important for safety and control.
8. **IMPORTANT!** Always turn the Pro Power 20K off when not in use. Make sure the machine is not spinning and at a complete stop before you place the hand piece into the carrying case slot or the hand piece cradle.

Medicoool, Inc • 20460 Gramercy Place • Torrance, CA 90501 • (310) 782-2200
www.medicoool.com/nails

HAND PIECE CHUCK DUST COVER

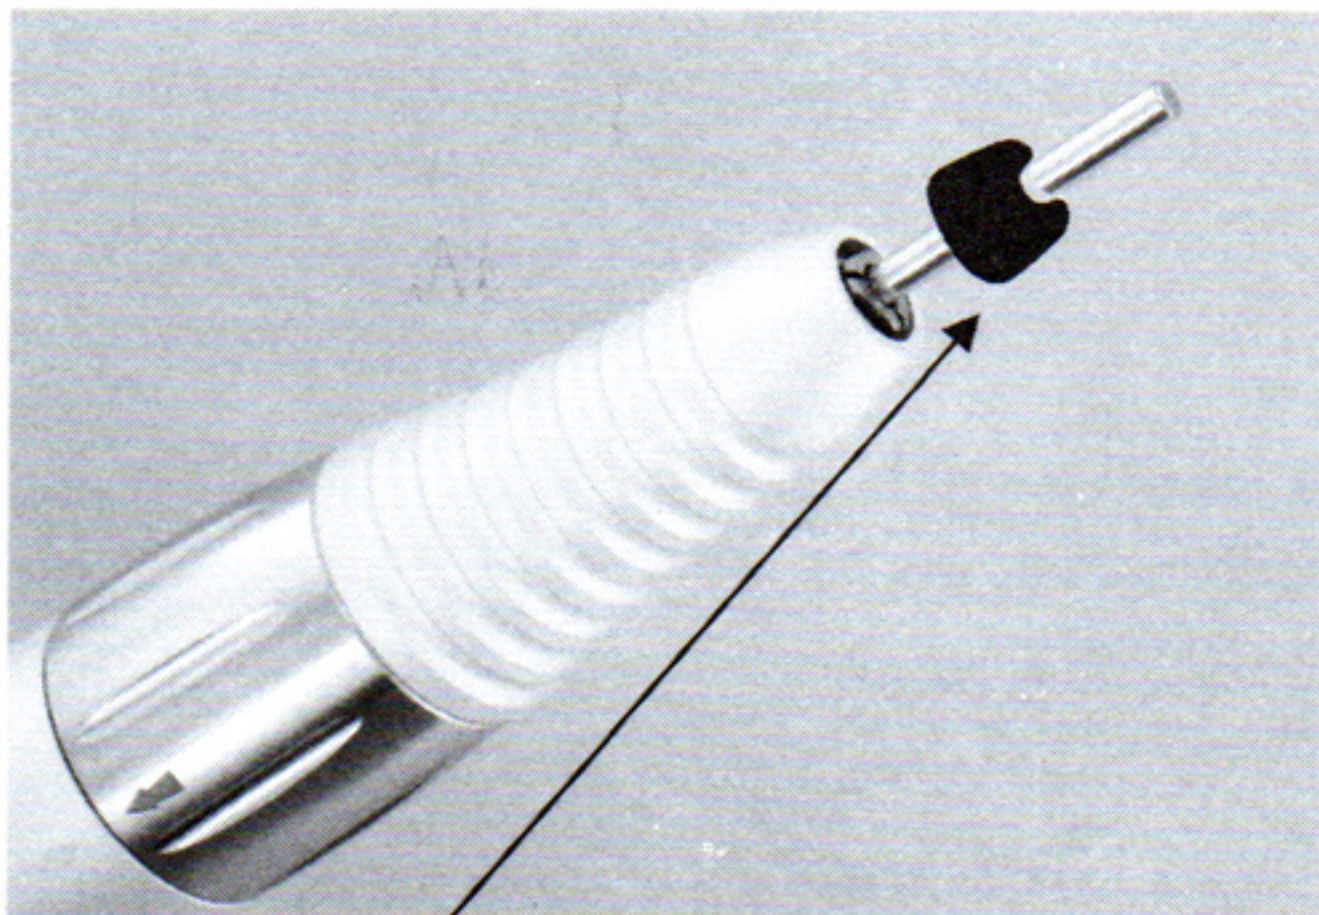

Remove from Blank, place on the Bit.
Helps keep chuck free of any dust particles

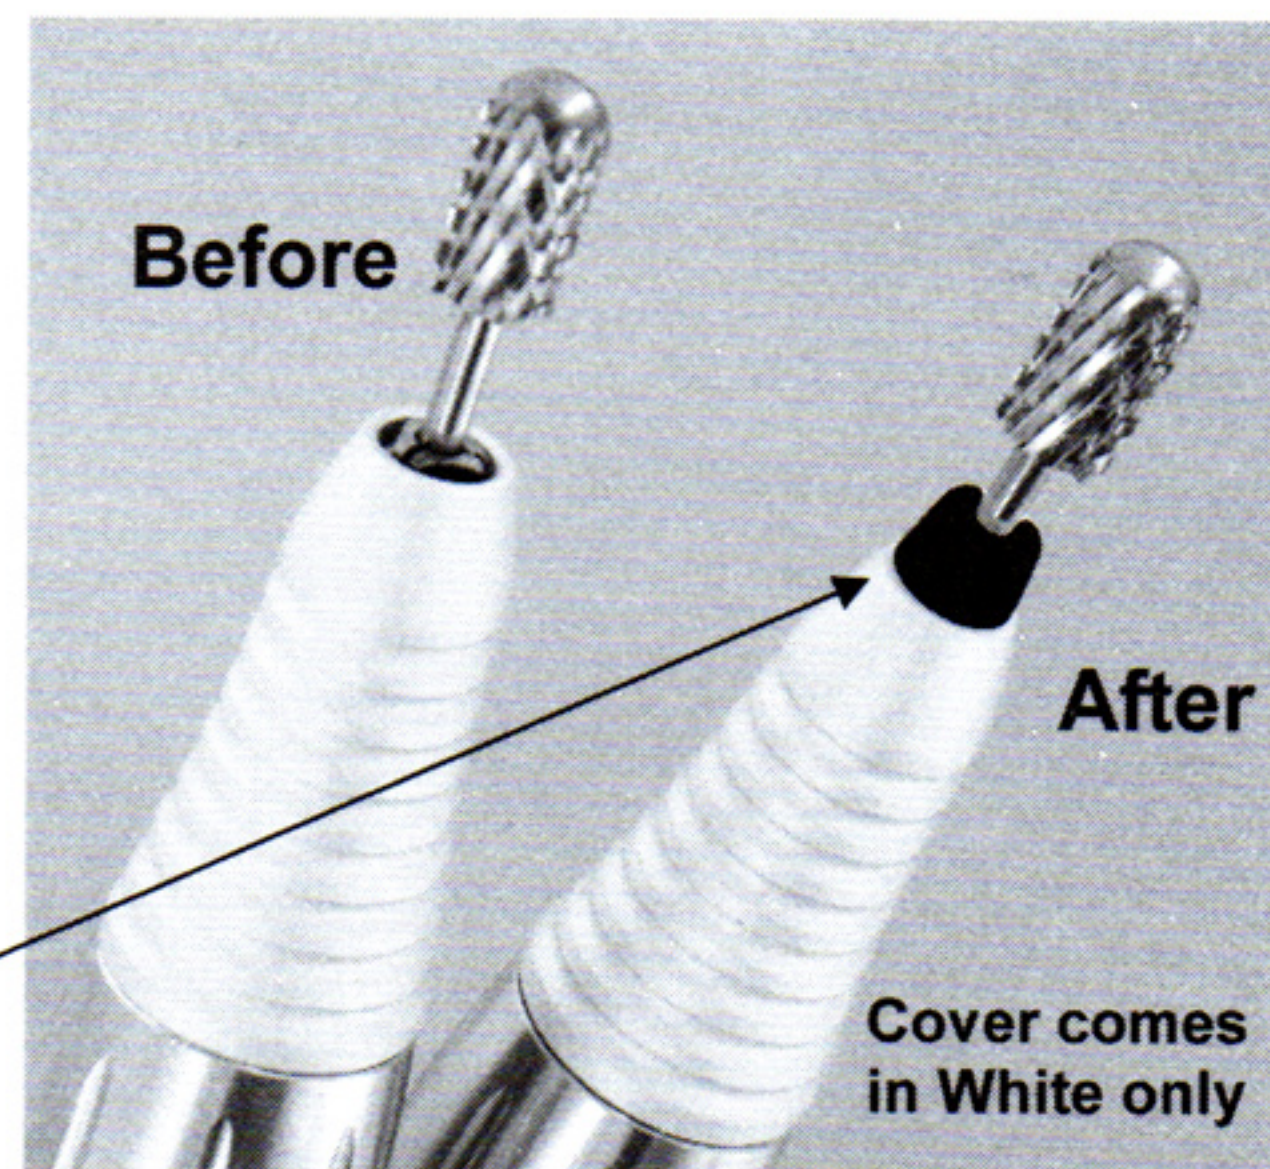


IMPORTANT MAINTENANCE PROCEDURES

A very important procedure must be performed after every customer to stop the buildup of dust, which in turn will prolong the life of the machine and stop the hand piece from clogging up with dust.

The area shown with arrows must be dust free and compressed air must be sprayed into this area at least daily, to reduce the build up of dust.

Failure to perform this procedure could cause the motor to clog with dust, stop functioning and burn out the hand piece and the control box and is not covered under the warranty.

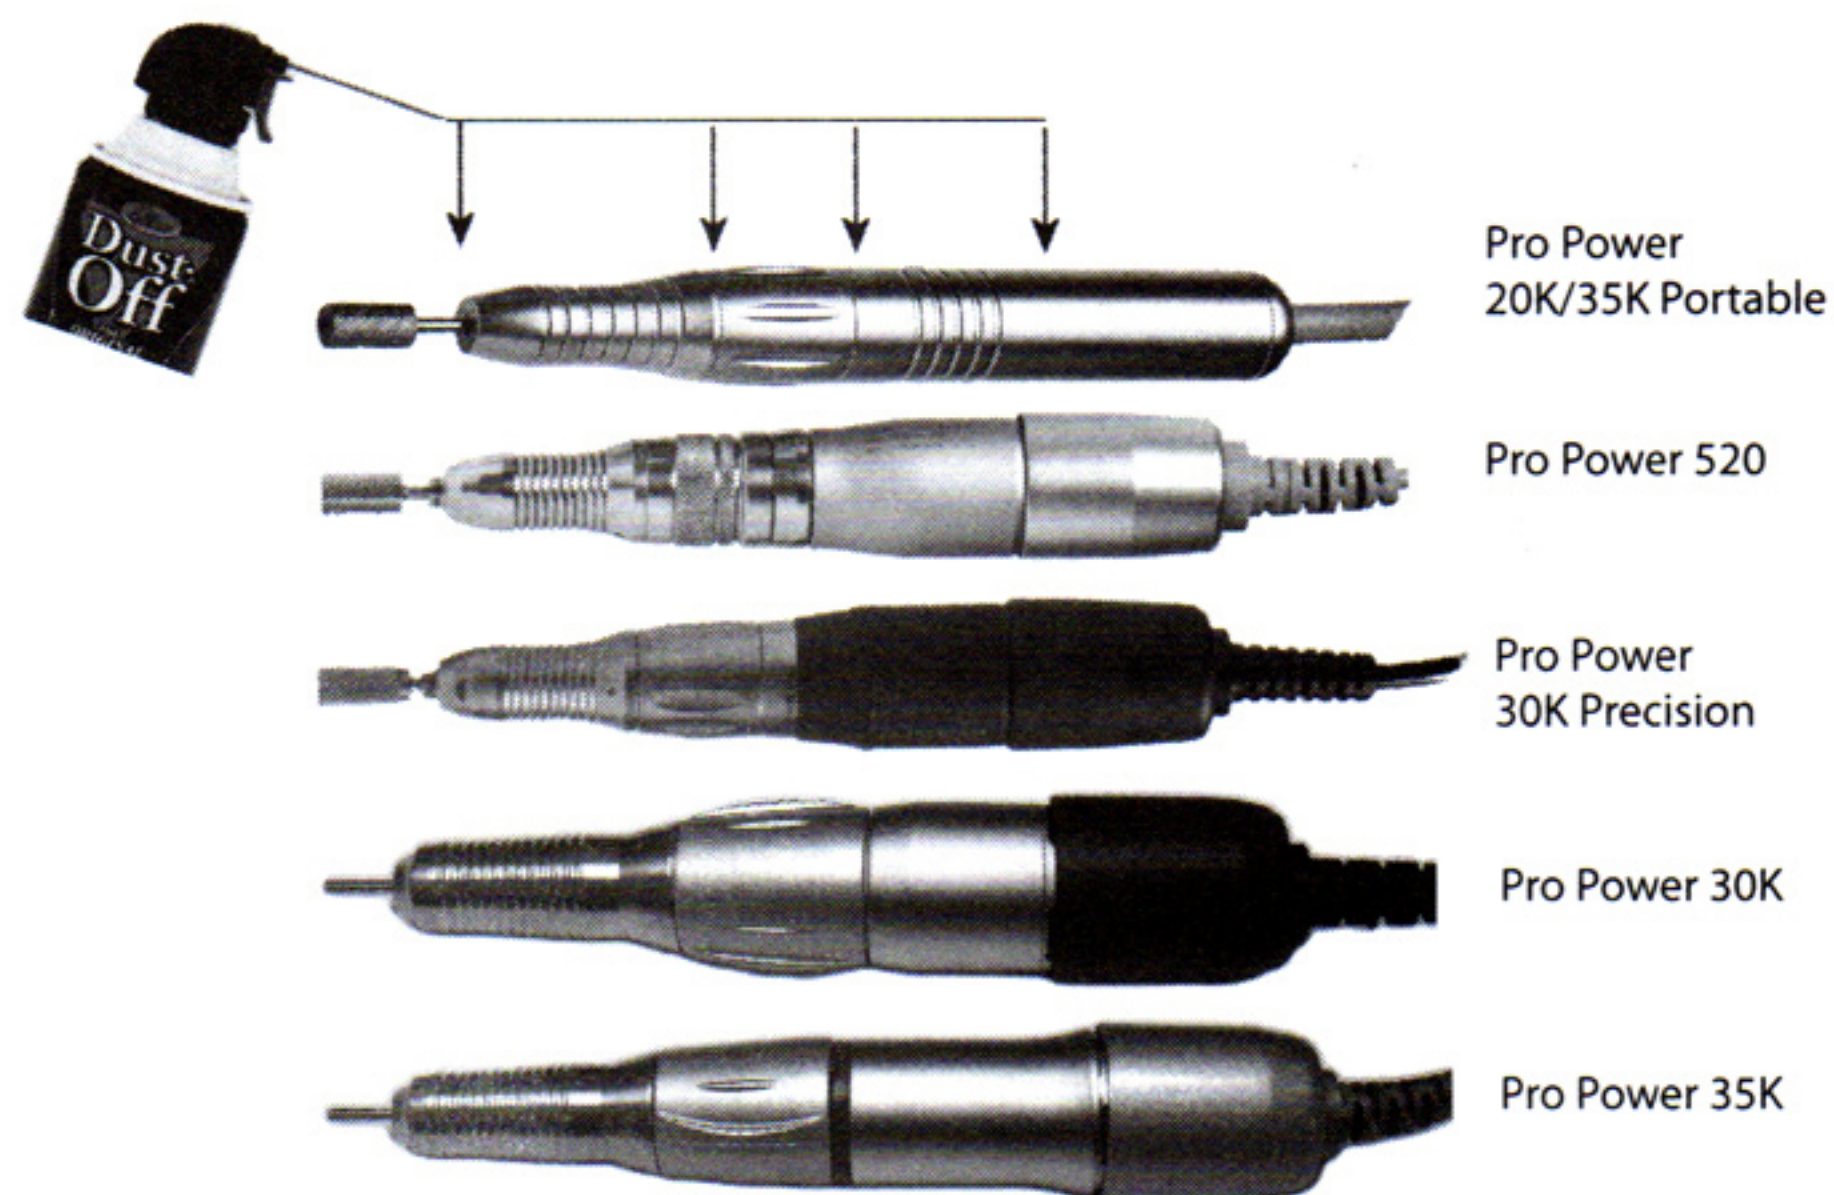

THANK YOU!

for shopping at
www.happynailsupply.com